

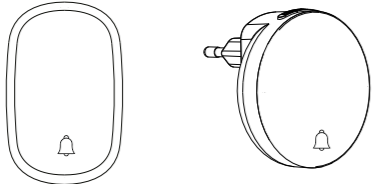 
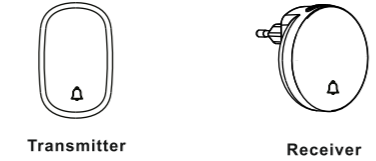 
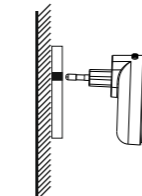 




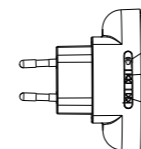 
 

 
技术要求

1.物料号: SW1A9488EB010

2.产品名称: Q3+QME欧标门铃套装说明书 中性英文说明书

3.材质: 125克铜版纸

4.尺寸: 70*90mm

 <p style="text-align: center;">Wireless Kinetic DoorBell User Guide</p>	<p>Product Description: This Wireless Kinetic doorbell employs micro-energy acquisition technology to provide battery-free installation and use. The ease of installation, IP67 waterproof rating, and various ring tones, make the Door Bell the ideal choice.</p>  <p style="text-align: center;">Transmitter Receiver</p> <p>Specifications:</p> <ul style="list-style-type: none"> • Operating Voltage: AC100V-240V 50/60Hz • Power Supply: Self-Powered • Communication: RF 433MHz • Working Range: 100m(Outdoors)40m(Indoors) • Volume Level: 4 levels • Ringtones: 38 songs optional • Temperature Range: -20℃ ~+55℃ • Storage Capacity: <ul style="list-style-type: none"> • The receiver can be paired with up to 10 Doorbell Transmitters • One doorbell Transmitters can be paired with an unlimited number of receivers 	<p>Installation:</p> <p>1.Plug the doorbell receiver directly into the electrical socket and it will ring once after the power is on. This product is suitable for indoors use only. Please avoid using it in high temperature, high humidity, dusty, and strong electromagnetic interference environments.(It is recommended to install it above 50cm from the ground, otherwise the signal will be weakened.)</p>  <p>2. Use 3M sticker paste the Transmitter: Tear off the 3M sticker on the back of the Transmitter and then paste it on the fixing part.(Do not stick on a metal door, otherwise it will affect the signal.)</p> 	<p>Or use screws to install the Transmitter:</p>  <p>①Mark the screw holes with the help of the enclose</p>  <p>②Attach the wall plate with the included screws; ③Attach the Transmitter onto the wall plate by sliding it top-down;</p> <p>3.To remove the Transmitter from the plate, please use a small screwdriver to push into the small hole at the bottom of the Transmitter and then pry upwards lightly. The Transmitter will slide up and out of the wall plate.</p> 	<p>Receiver keys' Function:</p>  <p>Volume key: Press this key and the volume will switch between levels 1-4. Ringtone selection key +: Press this key to cycle through the available ringtones. Ringtone selection key -/pairing button: Used for pairing and changing the ringtone to the previous one.</p> <p>Pairing Method:</p> <p>1.The Transmitter and Receiver in your package are already paired. If more than one Transmitter or Receivers are required to be paired, please follow the below steps:</p>  <p>a. Press the ringtone selection key - for 3 seconds until the light is flashing, then release the button.</p>  <p>b. Press the Transmitter once and the light will go off. This means that the pairing is successful.</p>	<p>Receiver clear Pairing:</p>  <p>Press the ringtone selection key - for 12 seconds until the light changes from flashing to still to off. The button can then be released. Once done all pairing information is cleared down.</p> <p>Power cut memory After a power cut the doorbell memorise the last set ringtone and ring volume.</p> <p>Silent mode When the volume is lowest, it defaults to silent mode.</p> <p>Restore the default state Press the Volume key for 3 seconds, then the ring tone and volume will be restored to the initial state.</p>	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>Certificate / Inspected</p> </div>
--	--	---	---	---	--	---