 


Key Function



 Volume key: Press this key and the volume will switch between levels 1-4.
 Ringtone selection key +: Press this key to cycle through

and changing the ringtones.
Ringtone selection key -/Pairing button: User for pairing and changing the ringtone to the previous one.

Pairing Method

Long press on Ringtone selection key -/Pairing button for 3 seconds, when the indicator flashes slowly, press selected switch to get both units paired. Indicator goes off that means pair succeeds. When receiver change ringtone, transmitter will work synchronously.

Silent Mode

When the volume is lowest, it defaults to silent mode.

Clear Pairing

Hold the Ringtone selection key -/Pairing button for about 12 seconds, the indicator of receiver will flash then goes off, memory is cleared. Repeat the pairing operation if new wireless control is requested.

Menory

When power cut happens, reconnect the power, doorbell will play the last ringtone and same sound volume selected before power cut.

Rebuilt Default Setting

Long press volume key for 3 seconds, loose finger when indicator light becomes constant on, now doorbell plays the default ringtone, sound volume come to default.

Certificate / Inspected